

ICON Ambient Shipper

ICON
A Symbol of Excellence

Central Laboratories




Place 95kPa bio bag in kit box.



Secure lid of kit box.



Place kit box in courier pak.

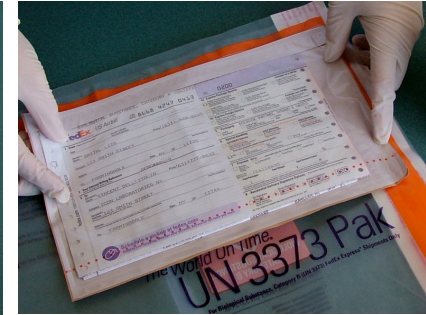

Place completed airbill on courier pak.